



INSTRUCTIONS



ECCODAL

Strong grass grid made from recycled material

Equipped with expansion joints to absorb thermal and mechanical stresses

Excavation

Carry out the necessary excavation work. Always remove the topsoil.



Foundation layer (only for vehicle applications)

Create a foundation layer at least 25 cm deep. Use a foundation substrate, which provides both a stable base and nutrients. Afterward, apply weight to the compacted foundation (e.g. with a heavy roller).



Bedding substrate

Lay the bedding layer using bedding substrate. For vehicle applications, the bedding layer should be 5 cm deep. For non-vehicle applications, where no foundation layer is used, this depth should be 15 cm.



ECCOdal grass grids

Place the ECCOdal grass grids and click them together using the expansion joints. The grass grids can be cut with a grinding disc.



Grass grid substrate

Fill the ECCOdal grass grids with substrate up to 1 cm (max. 0.5 cm) below the edge of the grid. Use grass grid substrate and brush it thoroughly to distribute it evenly and avoid gaps. This ensures a smooth and uniform surface.




Sow grass

Sow the grass into the ECCOdal grass grids.



Waiting period

After 6 to 8 weeks, you can start using the grass parking. If the parking area will be heavily used, we recommend waiting 16 weeks to allow the grass to grow densely. Mowing can be done during this period.

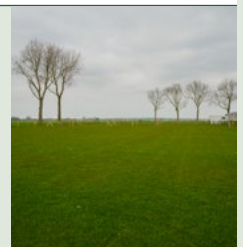

Tip

» Never fill the grass grids with only topsoil. Topsoil can compact too much, preventing grass seed from germinating.

Subscribe to the ECCOproducts YouTube channel for product and installation videos.

Want to receive all the latest information and news on our product range, like or follow our other social media channels.