

INSTALLATION GUIDELINES


ECCO 1Connect

Ready-to-use weed-free joint filler
vacuum-packed



1. Preparation

All joints must be sprayed at least 3 cm deep, in order to fill them with 1Connect afterwards.

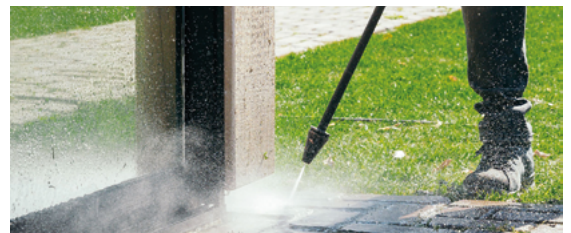


2. Application

Open the vacuum bag and distribute the 1Connect over the wet sprayed surface.



3. Sweeping

Sweep the product into the joints with a stiff broom or floor squeegee. Be sure to keep the pavement wet while sweeping.

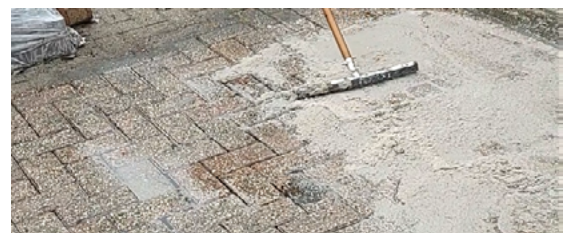

4. Easy to sweep

After 10 to 30 minutes, sweep diagonally with a soft broom until the pavement is clean.



(*) We recommend testing out the joint filler on a small area in advance.

ECCO  **PRODUCTS**